

## Control infection: Sanitize your Zebra devices

Follow these guidelines to protect yourself and others

Disinfecting your Zebra devices can help prevent the spread of viruses. Make it part of your safety routine. [Find out how below.](#)



### Dos & Don'ts

- Turn off and/or disconnect the device from AC/DC power before cleaning and disinfecting. (Recommended)
- Never spray or pour chemical agents directly onto the device. Don't allow liquid to pool.
- Disinfect all parts of your device. Don't forget cradles, cords, and chargers.
- Allow the device to air dry before use.



### Important Information about Cleaning Agents

- Only use Zebra-approved disinfecting agents for your particular device to comply with the warranty.
- Check the manual or [www.zebra.com/disinfect](http://www.zebra.com/disinfect) for an approved list of solutions for your specific model.
- **Healthcare Devices** (mobile computers, scanners, printers) can withstand certain bleach-based and hydrogen peroxide solutions. Verify if approved for your specific model.



### Take Precaution

- Certain chemicals are known to damage the plastics of Zebra devices. See [www.zebra.com/disinfect](http://www.zebra.com/disinfect) for a list of chemicals to avoid.
- Take special care with bleach-based disinfectants.
- **Note:** Some hand sanitizers contain ingredients that can be harmful to the device. Make sure your hands are completely dry before handling the device to prevent any damage.

For a complete guide to disinfecting your specific Zebra device, visit: [www.zebra.com/disinfect](http://www.zebra.com/disinfect)

